



niveo

P R O F E S S I O N A L

Set your network adapter to the right range:

Set laptop/PC LAN adapter to :

1. Open Network centre;
2. Select change adapter settings
3. Right-click on "lan connection"> Properties> Select internet protocol V4>Properties
4. Check Uses following IP address:
 - a. IP address: 192.168.1.250
 - b. Subnetmask: 255.255.255.0
 - c. Select OK

